



Antes de utilizar esta unidad, lea detenidamente los apartados: “UTILIZAR LA UNIDAD CON SEGURIDAD” y “PUNTOS IMPORTANTES” (p. 2, 3). Dichos apartados contienen información importante acerca del correcto funcionamiento de la unidad. Además, para sentirse seguro al respecto de haber obtenido un buen dominio sobre todas las prestaciones facilitadas por su nueva unidad, debe leer enteramente el Manual del Usuario. Este manual debe ser guardado y estar disponible para consultas.

Gracias y felicitaciones al haber escogido la Placa de Ampliación SRX-06 “SR-JV80 Collection Vol.1 Complete Orchestra”.

Esta Placa de Ampliación contiene todas las formas de onda de las colecciones “R-JV80-02 Orchestral, SR-JV80-13 Vocal y SR-JV80-16 Orchestral II” además de sonidos orquestales procedentes de formas de onda de la placa SR-JV80-07 SuperSoundSet. Esta placa contiene nuevos Patches y Sets de Percusión que combinan las formas de onda de una manera que optimiza el rendimiento de los Efectos SRX y del Control de Matrix.

Junto con los sonidos orquestales estándares como piano, cuerda, viento y percusión, esta placa también proporciona muchas frases de coros y voz individual. Estos sonidos pueden utilizarse en composiciones para orquesta, en música para filmes y en otras muchas situaciones.

- Patches: 449
- Sets de Percusión: 5
- Formas de Onda: 512.

* Los ajustes de los parámetros para los Patches y Sets de Percusión están optimizados para el Fantom, la serie XV y los modelos de la serie RD-700, de forma que habrán algunas pequeñas diferencias entre los sonidos que cada uno de estos instrumentos produce.

El CD-ROM suministrado contiene datos que reproducen los sonidos originales del SR-JV-05, SR-JV80-14 y SR-JV80-18. (Modelos Compatibles: Fantom, XV-5080, XV-5050, XV-3080, XV-88, XV-2020)

Esta placa dispone de un nuevo formato. Compruebe la versión del programa de sistema de su instrumento y si existe una actualización relevante, actualice su instrumento con el programa de actualización apropiado del CD-ROM. (Vea p.18.)

Este programa es aplicable a la SRX-01-09

UTILIZAR LA UNIDAD CON SEGURIDAD

INSTRUCCIONES PARA LA PREVENCIÓN DE INCENDIOS, DESCARGA ELÉCTRICA Y DAÑOS FÍSICOS

ACERCA DE AVISO Y PRECAUCIÓN

 AVISO	Se utilizará cuando se den instrucciones para alertar al usuario sobre el riesgo de muerte o de daños físicos graves por una utilización inadecuada de la unidad.
 PRECAUCIÓN	Se utilizará cuando se den instrucciones para alertar al usuario sobre el riesgo de sufrir daños físicos o daños materiales por una utilización inadecuada de la unidad. * Cuando se hace referencia a daños materiales se entiende cualquier daño o efecto adverso que pueda sufrir la casa y todo el mobiliario, así como el que puedan sufrir los animales de compañía.

ACERCA DE LOS SÍMBOLOS

	Este símbolo alerta al usuario sobre instrucciones importantes o advertencias. El significado específico del símbolo queda determinado por el dibujo que contenga dicho triángulo. En el caso del triángulo mostrado a la izquierda, se utiliza para precauciones de tipo general, para advertencias, o para alertas de peligro.
	Este símbolo alerta al usuario sobre lo que no debe realizar (está prohibido). Lo que no se puede realizar está debidamente indicado según el dibujo que contenga el círculo. Por ejemplo, el símbolo a la izquierda significa que no se debe desmontar la unidad nunca.
	Este símbolo alerta al usuario sobre las funciones que debe realizar. La función específica que debe realizar se indica mediante el dibujo que contiene el círculo. Por ejemplo, el símbolo a la izquierda significa que la clavija debe desconectarse de la toma de corriente.

OBSERVE SIEMPRE LO SIGUIENTE

AVISO

- Antes de utilizar la unidad, asegúrese de leer las instrucciones que se muestran a continuación y el Manual del Usuario. 
- No abra ni efectúe modificaciones internas en la unidad. 
- No intente reparar la unidad ni reemplazar elementos internos (excepto en el caso de que el manual le de instrucciones específicas que le indiquen que debe hacerlo). Diríjase a su proveedor, al Centro de Servicios Roland más cercano o a un distribuidor de Roland autorizado, de los que aparecen listados en la página “Información”. 
- No utilice jamás la unidad en lugares que estén:
 - Sujetos a temperaturas extremas (p. ej. expuesta a la luz del sol directa en un vehículo cerrado, cerca de una estufa, encima de un equipo que genere de calor); o 
 - Mojados (como baños, lavaderos, sobre suelos mojados); o 
 - Húmedos; o
 - Expuestos a la lluvia; o
 - Sucios o llenos de polvo; o
 - Sujetos a altos niveles de vibración.
- No permita que penetre en la unidad ningún objeto (como material inflamable, monedas, alfileres) ni líquidos de ningún tipo. 

AVISO

- En hogares con niños pequeños, un adulto deberá supervisar a los niños hasta que éstos sean capaces de seguir las normas básicas para el funcionamiento seguro de la unidad. 
- Proteja la unidad de golpes fuertes. ¡No deje que se caiga! 
- Antes de instalar la SRX-09, primero deberá apagar los aparatos Fantom / Serie XV / RD-700 y desconectar su cable de alimentación. 
- NO reproduzca nunca un disco CD-ROM en un reproductor convencional de CD de audio. Si lo hiciera, el nivel de volumen resultante podría ocasionar una pérdida auditiva permanente. Asimismo, también podría ocasionar daños en los altavoces u otros componentes del sistema de audio. 

PRECAUCIÓN

- No se suba nunca encima de la unidad, ni coloque objetos pesados encima de ella. 
- Instale la placa de circuitos sólo en la unidad especificada (Fantom / Serie XV / RD-700). Retire sólo los tornillos especificados al efectuar la instalación. 
- En caso de retirar los tornillos, cerciórese de guardarlos fuera del alcance de los niños con el fin de evitar que ellos los tragasen accidentalmente. 

* Debido al interés en el desarrollo de los productos, las características técnicas y/o el contenido de este paquete esán sujetos a modificaciones sin previo aviso.

PUNTOS IMPORTANTES

Cuando Vd. adquiere la placa de ampliación SRX-07 de un proveedor autorizado de Roland, Roland Corporation le ceda bajo licencia a Vd. el derecho del uso comercial de los sonidos y muestras suministradas con la unidad en la producción de música, en actuaciones públicas, en radio/televisión, etc. No le venden dichos elementos a Vd.

Vd. puede utilizar cualesquiera de las frases y/o muestras suministradas con la unidad en grabaciones comerciales o no comerciales sin costes de licencia adicionales. No obstante, Vd. debe observar estrictamente las siguientes normativas respecto a los créditos de cualquier grabación musical que utilice material procedente de la SRX-07.

La reproducción o duplicación de esta colección o de cualesquiera grabación sonora contenida en la SRX-07, sea en el estado original en el que se encuentran en esta placa de ampliación o mediante el reformateo, mezcla, aplicación de filtros, resintetización, el procesamiento o cualesquiera otra técnica de edición para su posterior uso en otro producto o para la reventa, está estrictamente prohibido sin el permiso expreso por escrito de Roland. Toda entrega, trueque, préstamo, alquiler, reedición, redistribución o reventa no autorizada de los sonidos contenidos en la SRX-07 está expresamente prohibida.

Hablando claramente: Utilice los sonidos de la SRX-07 para actividades creativas y mantenga esta biblioteca de sonidos para el uso exclusivo de Vd. NO LA COPIE. Roland iniciará acciones conformidad a derecho.

SE GARANTIZA QUE ESTA BIBLIOTECA DE SONIDOS ESTÁ LIBRE AL 100% DE DERECHOS DE AUTOR.

Además de los puntos relacionados en el apartado “UTILIZAR LA UNIDAD CON SEGURIDAD” en la página 2, lea y observe lo siguiente:

Manejo de CD-ROMs

- * Evite tocar o rallar la superficie inferior brillante (la superficie codificada) del disco. Es posible que sea imposible que la unidad lea correctamente los discos CD-ROM dañados o sucios. Mantenga sus discos limpios con un producto específico para la limpieza de CD.

Manejo de la Placa

Para evitar el riesgo de provocar daños en los componentes internos ocasionados por cargas de electricidad estática, siempre que maneje la placa, observe los siguientes puntos:

- * Antes de tocar la placa, toque un objeto metálico (como una cañería de agua) para quitarse cualquier carga de electricidad estática que lleve Vd.
- * Al manejar la placa, debe hacerlo tocando sólo sus bordes. Evite tocar los componentes electrónicos o conectores.
- * Guarde el bolso de embalaje y siempre que necesite guardar o transportar la placa, vuelva a meterla en la bolsa.

Lengua Francesa para el Estándar de Seguridad Canadiense

Veillez suivre attentivement les instructions suivantes quand vous manipulez la carte afin d'éviter tout risque d'endommagement des pièces internes par l'électricité statique.

- * Toujours toucher un objet métallique relié à la terre (comme un tuyau par exemple) avant de manipuler la carte pour vous décharger de l'électricité statique que vous auriez pu accumuler.
- * Lorsque vous manipulez la carte, la tenir par les côtés. Évitez de toucher aux composants ou aux connecteurs.
- * Conservez le sachet d'origine dans lequel était la carte lors de l'envoi et remettez la carte dedans si vous devez la ranger ou la transporter.


INSTALAR LA PLACA DE AMPLIACIÓN DE ONDAS

- * *Apague el instrumento.*
- 1. Retire la tapa localizada en la parte superior (o posterior) del instrumento.
 - * *Al colocar la unidad boca abajo, ponga algunos periódicos o revistas debajo de las cuatro esquinas o en ambos lados para evitar dañar los botones y controles. Además debe intentar colocar la unidad de forma que no haya peligro de dañar los botones y controles.*
 - * *Al colocar la unidad boca abajo, tenga cuidado de no dejarla caer al suelo ni permitir que se vuelque.*
- 2. Introduzca el conector de la Placa de Ampliación de Ondas en uno de los conectores de la ranura para placas de la Serie SRX mientras introduzca simultáneamente las fijaciones para placa en los agujeros en la Placa de Ampliación.
 - * No toque los circuitos o terminales de conexión
 - * Nunca fuerce la placa al instalarla. Si no cabe correctamente, retírela y vuelva a intentarlo de nuevo.
- 3. Utilice la herramienta suministrada con la Placa de Ampliación de Ondas para girar las fijaciones hasta llegar a la posición LOCK (fijado), fijando así la Placa de Ampliación de Ondas en su correcta posición.
(Para quitar la Placa de Ampliación, gire las fijaciones en la dirección UNLOCK y levante la Placa.)
 - * *Una vez instalada la placa, compruebe su trabajo.*
- 4. Utilizando los tornillos que retiró en el Paso 1, vuelva a fijar la tapa en su posición original.
- 5. Compruebe que la Placa de Ampliación de Ondas esté instalada correctamente.
 - * *Si en la pantalla de Selección de Formas de Onda no puede seleccionar "EXP" (porque no se muestra) (vea el manual del usuario del instrumento que utilice), quite la Placa de Ampliación de Ondas y vuelva a instalarla correctamente.*

Lengua Francesa para el Estándar de Seguridad Canadiense

- * *Éteindre l'instrument.*
- 1. Retirer le couvercle situé sur le dessus (ou à l'arrière) de l'instrument.
- 2. Insérer le connecteur de la carte dans un des creneaux pour la serie SRX tout en enfonçant les supports à carte dans les trous de celle-ci.
 - * *Ne pas toucher aux circuits imprimés ou aux connecteurs.*
 - * *Ne jamais forcer lors de l'installation de la carte de circuits imprimés. Si la carte s'ajuste mal au premier essai, enlevez la carte et recommencez l'installation.*
- 3. Utiliser l'outil d'installation fourni pour tourner les clips de retenue vers la position de blocage (LOCK) de façon à ce que la carte soit retenue en place.
(Pour retirer la carte d'expansion Wave, tourner les clips de retenue de la carte vers la position déblocage (UNLOCK) et retirer la carte en la soulevant.)
 - * *Quand l'installation de la carte de circuits imprimés est terminée, vérifiez si tout est bien installé.*
- 4. Remettre la plaque à sa place et la fixer à l'aide des vis enlevées à l'étape 1.
- 5. S'assurer que la carte d'expansion Wave est installée correctement.

S'il est impossible de sélectionner l'affichage "EXP" (il n'apparaît pas) à l'écran de sélection Waveform (se reporter au guide du propriétaire de l'instrument utilisé), retirer la carte d'expansion Wave et la réinstaller correctement

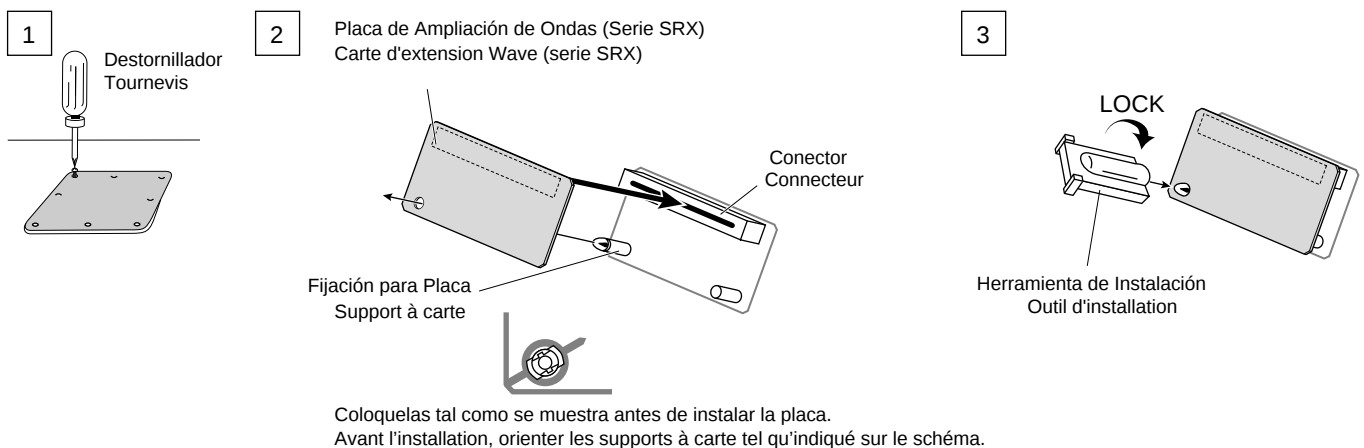

Lista de Patches (1)

Para la Serie /Fantom/XV

(SELECCIÓN DE BANCO MSB : 93; LSB : 7 [N°001-128], LSB : 8 [N°129-256], LSB : 9 [N°257-384], LSB;10 [N°385-449])

Nº	Nombre	Voces	Categoría
1	WarmVlns SRX	3	STRINGS
2	Legato Vlns	8	STRINGS
3	NaturalVlnsS	2	STRINGS
4	Agitato Vlns	4	STRINGS
5	Vlns-Spc /	4	STRINGS
6	VI&Va Spicct	4	STRINGS
7	Arco Vas SRX	2	STRINGS
8	Agitato Vas	4	STRINGS
9	Vlas-Spc /	4	STRINGS
10	Marc Vas SRX	2	STRINGS
11	Vc Sec mf	4	STRINGS
12	Fast Cellos	4	STRINGS
13	Vcs Legato	1	STRINGS
14	3 Cellos	3	STRINGS
15	Cellos	3	STRINGS
16	CelloSectMrc	4	STRINGS
17	Marcato Vcs	3	STRINGS
18	Agitato Vcs	4	STRINGS
19	Vcs+Cbs SRX	2	STRINGS
20	Arco Vcs+Cbs	8	STRINGS
21	Thick Bases	2	STRINGS
22	Cb Sect SRX	4	STRINGS
23	WideBasses S	1	STRINGS
24	Agitato Cbs	4	STRINGS
25	BIG StrgEns	4	STRINGS
26	Big Strings2	4	STRINGS
27	Orch p	2	STRINGS
28	Orch p>f/ Mod	4	STRINGS
29	StrsArco SRX	4	STRINGS
30	StrSwel/ ModS	4	STRINGS
31	StStrOrcp/ fS	2	STRINGS
32	SlowResinStr	4	STRINGS
33	Adagio Strs	4	STRINGS
34	LegatoStrngs	8	STRINGS
35	Intim StrSec	4	STRINGS
36	DramaStrsSRX	4	STRINGS
37	St Str p/ f	4	STRINGS
38	SlowEpic Str	8	STRINGS
39	Real Strings	2	STRINGS
40	4Seasons SRX	4	STRINGS
41	VlVaVcCb SRX	4	STRINGS
42	StudioString	4	STRINGS
43	Quartet SRX	4	STRINGS
44	VibSwStrings	4	STRINGS
45	Str Swell	4	STRINGS
46	OuvertureSRX	4	STRINGS
47	Cluster Sect	8	STRINGS
48	Velo Str SRX	4	STRINGS
49	Agitato to 0	5	STRINGS
50	DynaMarc SRX	4	STRINGS
51	VivaceStrSRX	4	STRINGS
52	Agitato STR	4	STRINGS
53	STR SpiccSRX	3	STRINGS
54	StacctoSectn	6	STRINGS
55	Spicc/ releas	4	STRINGS
56	STR Marcato	2	STRINGS
57	Big Marcato!	4	STRINGS
58	Spicc Sect	6	STRINGS
59	Spc+Pz/ rleas	4	STRINGS
60	Piz-Spc /	6	STRINGS
61	RoomPizz SRX	4	STRINGS
62	Stage Pizz	4	STRINGS
63	Nite Pizzico	5	STRINGS
64	VIOLIN solo	2	STRINGS
65	Solo Vln /	2	STRINGS
66	Solo Violin	1	STRINGS
67	Sad S.VlnSRX	2	STRINGS
68	Solo Viola	1	STRINGS
69	AgitatoVaSRX	2	STRINGS
70	Solo Cello 1	1	STRINGS
71	Solo Cello 2	1	STRINGS
72	The V Cello	2	STRINGS
73	Solo Vc /	2	STRINGS
74	Marcato Vc	1	STRINGS
75	Vln&Vcl	2	STRINGS
76	Solo Cb /	2	STRINGS
77	Tape Orc SRX	3	STRINGS
78	Tape Str SRX	6	STRINGS
79	Old Tale	2	STRINGS
80	Mellow Tape	2	STRINGS
81	Cystaline Pd	8	STRINGS
82	SynStrings	3	STRINGS
83	Full Orc SRX	4	ORCHESTRA
84	St.OrcUniSRX	2	ORCHESTRA
85	OrchUnif SRX	4	ORCHESTRA
86	GRAND OrcSRX	3	ORCHESTRA
87	WavinGoodbye	4	ORCHESTRA
88	DynOrchestr1	5	ORCHESTRA
89	Pathetique	5	ORCHESTRA
90	Oboes & Sect	6	ORCHESTRA

Nº	Nombre	Voces	Categoría
91	SlowEpicOrch	8	ORCHESTRA
92	Grand Tutti	5	ORCHESTRA
93	Ultimate Orc	5	ORCHESTRA
94	SuspenceOrch	3	ORCHESTRA
95	Tremolo /	1	ORCHESTRA
96	TremOrc / Mod	2	ORCHESTRA
97	ORC full+BD	5	ORCHESTRA
98	Finally Orch	4	ORCHESTRA
99	Orch & Choir	7	ORCHESTRA
100	NowWeAreFree	4	ORCHESTRA
101	Too Tense	6	ORCHESTRA
102	Orchestr1SRX	6	ORCHESTRA
103	DynOrchestr2	5	ORCHESTRA
104	GiantOrchest	6	ORCHESTRA
105	Strngs&Horns	4	ORCHESTRA
106	Full Orch. 1	2	ORCHESTRA
107	Full Orch. 2	4	ORCHESTRA
108	Full Orch. 3	4	ORCHESTRA
109	End Titles	4	ORCHESTRA
110	HornStrs SRX	4	ORCHESTRA
111	SRX Full Orc	5	ORCHESTRA
112	Harp & Flute	2	ORCHESTRA
113	Celesta&Flt	3	ORCHESTRA
114	ProkofievSRX	3	ORCHESTRA
115	MassInCeeSRX	4	ORCHESTRA
116	PentatnicSRX	1	ORCHESTRA
117	DawnSynphony	4	ORCHESTRA
118	Bad Ending	7	ORCHESTRA
119	Epic Ending	8	ORCHESTRA
120	Catwalk	5	HIT&STAB
121	OrchStaccato	4	HIT&STAB
122	Staccato SRX	2	HIT&STAB
123	OrchHitStack	4	HIT&STAB
124	Dynam Hit	5	HIT&STAB
125	MondoHit SRX	3	HIT&STAB
126	OrchHit SRX	4	HIT&STAB
127	OrcHitMajSRX	2	HIT&STAB
128	OrcHitMinSRX	2	HIT&STAB
129	OrcHitDimSRX	2	HIT&STAB
130	Big Hit Maj1	3	HIT&STAB
131	Big Hit Maj2	4	HIT&STAB
132	Big Hit Min	4	HIT&STAB
133	Big Hit Dim	4	HIT&STAB
134	Sfz! Hit-Maj	5	HIT&STAB
135	Sfz! Hit-Min	5	HIT&STAB
136	Suspense	2	HIT&STAB
137	Hit/ Off-Maj	7	HIT&STAB
138	Trem Hit-Maj	5	HIT&STAB
139	Trem Hit-Min	5	HIT&STAB
140	Trem Hit-Dim	5	HIT&STAB
141	Orc/ Prc 5-1^	4	HIT&STAB
142	Drama Stab	7	HIT&STAB
143	Maj Concern	8	HIT&STAB
144	OrcGlsMajSRX	1	HIT&STAB
145	OrcGlsMinSRX	1	HIT&STAB
146	Harp Up Hit	4	HIT&STAB
147	Harp Dn Hit	4	HIT&STAB
148	BrassStabSRX	4	HIT&STAB
149	Finale	5	HIT&STAB
150	Tuned HIT	3	HIT&STAB
151	YourMissionS	4	HIT&STAB
152	Big Hit SRX	4	HIT&STAB
153	HorrorHitSRX	4	HIT&STAB
154	Perc Hit	4	HIT&STAB
155	BrassFallSRX	2	HIT&STAB
156	Tp Fall	1	HIT&STAB
157	BrsStacc SRX	1	HIT&STAB
158	Finale SRX /	3	HIT&STAB
159	Orch Piccolo	2	FLUTE
160	Picc Vel Tr	1	FLUTE
161	Piccolo Trio	3	FLUTE
162	Orch Flute	1	FLUTE
163	Vibra Flute	1	FLUTE
164	FluteAtm/ Aft	2	FLUTE
165	Picc/ Fl 8va	3	FLUTE
166	Double Flute	1	FLUTE
167	Fl/ EH Usn	4	FLUTE
168	Calliope SRX	4	FLUTE
169	DynoCelt SRX	2	FLUTE
170	Ethnic Flute	1	FLUTE
171	AmbiFluteSRX	2	FLUTE
172	T.WhistleDly	1	FLUTE
173	TinWhistle	1	FLUTE
174	Sop Recorder	1	FLUTE
175	Tnr Recorder	1	FLUTE
176	Whistle SRX	2	FLUTE
177	Solo Clari	1	WIND
178	Unison Clari	2	WIND
179	Orch Clar	2	WIND
180	Bs Clairenet	1	WIND

Nº	Nombre	Voces	Categoría
181	Orch Bs Clar	2	WIND
182	Cl/ Bs Cl 8va	4	WIND
183	Fl/ Cl Usn	3	WIND
184	Fl/ Cl 8va	3	WIND
185	Orch Oboe	2	WIND
186	Sweet Oboe	1	WIND
187	Cor Oboe	1	WIND
188	OBOE Solo	1	WIND
189	2 Close Oboe	3	WIND
190	Orch Eng Hrn	2	WIND
191	Horn'o U.K.	1	WIND
192	Orch Bassoon	2	WIND
193	Bassoon III	1	WIND
194	BassFoons	3	WIND
195	Cl/ Bsn Usn	4	WIND
196	Cl/ Bsn 8va	4	WIND
197	Fl/ Ob Usn	3	WIND
198	Fl/ EH 8va	4	WIND
199	Fl/ Bsn 8va	3	WIND
200	BsCl/ Bsn 8vb	4	WIND
201	BsCl/ Bsn Usn	4	WIND
202	Cl/ Hrn/ Bsn 1	6	WIND
203	Cl/ Hrn/ Bsn 2	5 (6)	WIND
204	Ob/ Hrns/ Bsns	5 (6)	WIND
205	Ob/ Bsn 8va	3	WIND
206	Ob/ EH Usn	4	WIND
207	Ob/ EH 8va	4	WIND
208	EH/ Bsn Usn	4	WIND
209	EH/ Bsn 8va	4	WIND
210	EH/ Cl Usn	4	WIND
211	EH/ Bs Cl 8va	3	WIND
212	Ob/ Cl Usn	3	WIND
213	Ob/ BsCl 15va	3	WIND
214	Hrns/ Bsns	6	WIND
215	Really Reeds	4	WIND
216	Reed Duet	2	WIND
217	Multi Reeds	3	WIND
218	Medieval Rds	3	WIND
219	ScottishPIPE	1	WIND
220	Hill&Sheeps	2	ETHNIC
221	HilndChr SRX	1	ETHNIC
222	Solo Fr.Horn	1	AC.BRASS
223	SoloF.HrnSRX	1	AC.BRASS
224	HrnAccompSRX	2	AC.BRASS
225	Orch Hrns Sw	4 (5)	AC.BRASS
226	Hornz Stereo	2	AC.BRASS
227	Orch Hrns ff	3	AC.BRASS
228	FizzHorns ff	3	AC.BRASS
229	Fr.Horns SRX	3	AC.BRASS
230	Dynamic Hrns	2	AC.BRASS
231	Horn Sect /	2	AC.BRASS
232	Fr.HrnSfzSRX	2	AC.BRASS
233	MuteFr.Horns	2	AC.BRASS
234	F.Horn Rip	2	AC.BRASS
235	Trumpet Plus	1	AC.BRASS
236	Natural Tmpt	1	AC.BRASS
237	Real Tp SRX	1	AC.BRASS
238	El Bono SRX	2	AC.BRASS
239	Coronet	1	AC.BRASS
240	Flugelhorn	1	AC.BRASS
241	Mute Tp SRX	1	AC.BRASS
242	HrmnMute SRX	1	AC.BRASS
243	WahMute / Mod	2	AC.BRASS
244	Trumpeters	4	AC.BRASS
245	Tp Ens SRX	3	AC.BRASS
246	Trumps fff!!	4	AC.BRASS
247	Softy Bones	4	AC.BRASS
248	Bone Fluegal	2	AC.BRASS
249	Natural Tbn	1	AC.BRASS
250	Trombone SRX	1	AC.BRASS
251	SoloTb SRX 1	1	AC.BRASS
252	SoloTb SRX 2	1	AC.BRASS
253	Bs Tb	1	AC.BRASS
254	Tbn One	1	AC.BRASS
255	Bone Boys	4	AC.BRASS
256	Bones sectn	4	AC.BRASS
257	BigBones SRX	4	AC.BRASS
258	BsBoneScsSRX	3	AC.BRASS
259	Noblesse	3	AC.BRASS
260	Brass Choral	3	AC.BRASS
261	BrassEns/ Mod	4	AC.BRASS
262	Small Brass	4	AC.BRASS
263	Brass Orche	4	AC.BRASS
264	Switch Fall	2	AC.BRASS
265	4-Pc Brs Scn	4	AC.BRASS
266	BiggieBrsSRX	4	AC.BRASS
267	SoloTuba SRX	2	AC.BRASS
268	Tuba sfz/ Mod	3	AC.BRASS
269	Tuba SRX	2	AC.BRASS
270	Medieval Brs	4	AC.BRASS

Lista de Patches (2)

Para la Serie /Fantom/XV

(SELECCIÓN DE BANCO MSB : 93; LSB : 7 [N°001-128], LSB : 8 [N°129-256], LSB ; 9 [N°257-384], LSB;10 [N°385-449])

Nº	Nombre	Voces	Categoría
271	Full Brass	4	AC.BRASS
272	Brass ff	2	AC.BRASS
273	Brass Sect /	4	AC.BRASS
274	Multi Sax	2	SAX
275	St.EuroPiano	4	AC.PIANO
276	JoyoClassics	2	AC.PIANO
277	Empathy	3	AC.PIANO
278	Piano & Strs	6	AC.PIANO
279	Pno Concerto	6	AC.PIANO
280	Song Wish	6	AC.PIANO
281	HpsFrntSRX 1	3	KEYBOARDS
282	HpsFrntSRX 2	2	KEYBOARDS
283	HpsFrntSRX 3	1	KEYBOARDS
284	HpsBackSRX 1	4	KEYBOARDS
285	HpsBackSRX 2	2	KEYBOARDS
286	HpsBackSRX 3	2	KEYBOARDS
287	Hps F/B SRX	3	KEYBOARDS
288	Hps F4/B SRX	3	KEYBOARDS
289	Hps F/B/B4 S	4	KEYBOARDS
290	HpsLuteSRX 1	4	KEYBOARDS
291	HpsLute 2	2	KEYBOARDS
292	HpsLute 3	2	KEYBOARDS
293	FullHarpsi 1	3	KEYBOARDS
294	FullHarpsi 2	3	KEYBOARDS
295	Continuo Pdl	2	KEYBOARDS
296	Celesta SRX	2	KEYBOARDS
297	MusicBellSRX	2	BELL
298	Water Mallet	3	BELL
299	Newborn	4	BELL
300	Victoriana 1	3	BELL
301	St.M.Box SRX	2	BELL
302	Victoriana 2	3	BELL
303	ChurchBellS1	2	BELL
304	BlfryChm SRX	4	BELL
305	ChurchBellS2	3	BELL
306	Tub.Bells S1	2	BELL
307	Tub.Bells S2	1	BELL
308	BsMarimbSRX1	2	MALLET
309	BsMarimbSRX2	1	MALLET
310	MultiMallets	3	MALLET
311	Glocken	1	MALLET
312	Glockeneste	3	MALLET
313	GlocklnstSRX	2	MALLET
314	Clear Glock	1	MALLET
315	Xylorimba	2	MALLET
316	Xylophone S1	2	MALLET
317	Xylophone S2	1	MALLET
318	Mallet Stack	4	MALLET
319	OrgFlutes S1	3	ORGAN
320	OrgFlutes S2	4	ORGAN
321	OrgFlutes S3	2	ORGAN
322	OrgFlute 8'S	1	ORGAN
323	Psyche Pipes	2	ORGAN
324	ChrchPipes S	4	ORGAN
325	Organ&Recdr	4	ORGAN
326	Early Harma	5	ORGAN
327	CathedralSRX	4	ORGAN
328	Harmonium	2	ORGAN
329	ChurchOrgSRX	4	ORGAN
330	OrganChrdSRX	3	ORGAN

Nº	Nombre	Voces	Categoría
331	Musaccordion	5	ACCORDION
332	Mystery Pad	4	PULSATING
333	Psychedelic1	4	SYNTH FX
334	Psychedelic2	4	SYNTH FX
335	Eylsium m7^	6	SYNTH FX
336	Eylsium 9th^	6	SYNTH FX
337	Eylsium +7^	6	SYNTH FX
338	Eylsium b9^	6	SYNTH FX
339	Vln RunUp Mj	8	SYNTH FX
340	Vln RunUp Mn	8	SYNTH FX
341	Vln RunDn Mj	8	SYNTH FX
342	Vln RunDn Mn	8	SYNTH FX
343	Maj/MinHarps	2	SYNTH FX
344	9th/b9 Harps	2	SYNTH FX
345	Harp m7 SRX	1	SYNTH FX
346	Harp 9th SRX	1	SYNTH FX
347	Harp +7 SRX	1	SYNTH FX
348	Harp b9 SRX	1	SYNTH FX
349	Harp m7ScISRX	4	SYNTH FX
350	Harp9thScrlS	4	SYNTH FX
351	Harp+7ScISRX	4	SYNTH FX
352	Harpb9ScISRX	4	SYNTH FX
353	Cluster Gong	4	SYNTH FX
354	Sus.Perc Hit	4	SYNTH FX
355	Prc Ens6-Maj	5	SYNTH FX
356	Prc Ens7-Min	5	SYNTH FX
357	Prc Ens8-Dim	5	SYNTH FX
358	Cluster SRX	1	SYNTH FX
359	HorrorClustr	2	SYNTH FX
360	Hell Section	4	SYNTH FX
361	Legettimare	7	SYNTH FX
362	Limbus SRX	2	SYNTH FX
363	Backword	8	SYNTH FX
364	Dreamseq SRX	4	SYNTH FX
365	Midnight SRX	4	SYNTH FX
366	Colombus SRX	4	SYNTH FX
367	Once Upon A	5	OTHER SYNTH
368	Desert Dream	4	OTHER SYNTH
369	AncientTimes	5	OTHER SYNTH
370	Tension SRX	5	OTHER SYNTH
371	Wreck	6	BRIGHT PAD
372	Eclipse SRX	4	BRIGHT PAD
373	PulsingVox S	3	BRIGHT PAD
374	SynthStr.Pad	2	SOFT PAD
375	Meditate PAD	4	SOFT PAD
376	Choir	3	VOX
377	Angelic Pad	4	VOX
378	BoysChoirSRX	1	VOX
379	Sing! /Mod	6	VOX
380	SmockyVoces	2	VOX
381	Smooth Choir	5	VOX
382	X.. Vox SRX	3	VOX
383	RealChoirSRX	4	VOX
384	StChrMm / Ah S	4	VOX
385	Mmms & Aaahs	2	VOX
386	Choir / Mod	4	VOX
387	Close Mouths	1	VOX
388	Voice Stax	7	VOX
389	MorphieChoir	6	VOX
390	Morph4Choir	8	VOX

Nº	Nombre	Voces	Categoría
391	17th Movemnt	6	VOX
392	Matins	2	VOX
393	Quartet II 5	4	VOX
394	Scat /	2	VOX
395	Scatmen! SRX	1	VOX
396	The Voices	2	VOX
397	VocalCollect	2	VOX
398	GregorianCho	4	VOX
399	Soprano&co.	2	VOX
400	Tenor solo	1	VOX
401	ClarsahHarpS	1	PLUCKED
402	Heavens Harp	5	PLUCKED
403	C.Hrp / padSRX	4	PLUCKED
404	PhaseClarsah	4	PLUCKED
405	ClearHarpSRX	2	PLUCKED
406	Nails Harp	2	PLUCKED
407	Harp SRX	1	PLUCKED
408	Natural Harp	1	PLUCKED
409	Warm Harp	1	PLUCKED
410	Bousouk&Harp	4	PLUCKED
411	Etheral Lute	4	PLUCKED
412	DelicateCOMB	3	PLUCKED
413	St.CymblnSRX	2	PLUCKED
414	CymblnDuoSRX	2	PLUCKED
415	Bohemian SRX	3	PLUCKED
416	Bousouki Pic	2	PLUCKED
417	Bousouki	1	PLUCKED
418	PulcinelaSRX	4	PLUCKED
419	SN Roll SRX/	3	PERCUSSION
420	Perc Ens 1^	3	PERCUSSION
421	Perc Ens 2^	4	PERCUSSION
422	Perc Ens 3^	6	PERCUSSION
423	Perc Ens 4^	6	PERCUSSION
424	Perc Ens 5^	5	PERCUSSION
425	Orch Percs	4	PERCUSSION
426	BodhranSplit	1	PERCUSSION
427	BodhranVel S	3	PERCUSSION
428	CrazyBodhrnS	1	PERCUSSION
429	BodhranMenuS	1	PERCUSSION
430	Perc Mix SRX	2	PERCUSSION
431	MassiveTimpa	4	PERCUSSION
432	4-way Timps	3	PERCUSSION
433	DynaTimpsSRX	2	PERCUSSION
434	TimpaniRoll1	4	PERCUSSION
435	TimpaniRoll2	4	PERCUSSION
436	MultiTimpani	1	PERCUSSION
437	Roll > Klang	5	PERCUSSION
438	Timpani /	2	PERCUSSION
439	Big Orc.Perc	3	PERCUSSION
440	WindChimeSRX	1	PERCUSSION
441	FingerCymSRX	1	PERCUSSION
442	ConcertBDSRX	3	PERCUSSION
443	BD Roll SRX/	2	PERCUSSION
444	Tam Tam SRX	2	PERCUSSION
445	Piatti!! SRX	2	PERCUSSION
446	SleighBellsS	1	PERCUSSION
447	SlapstickS /	2	PERCUSSION
448	TambourineS/	1	PERCUSSION
449	CastanetsS /	1	PERCUSSION

^ : Acento
/ : Variación de Sonido obtenido con Key Velocity
/Mod : Variación de Sonido obtenido con Modulation (CC:01)
/Aft : Variación de Sonido obtenido con Aftertouch (CC:97)

Al tocar con patches procedentes de la placa de ampliación, recomendamos que todos los ajustes de EFFECTS ON / OFF en el Fantom / serie XV sean “ON.” Si los ajusta en “OFF,” es posible que no obtenga el sonido deseado.

- * Al tocar en el XV-3080/88 con el Patch 34, éste tendrá el número de voces indicado entre paréntesis.
- * Tenga en cuenta que el Tiempo de Desvanecimiento ha sido ajustado a un valor bastante alto en algunos de los patches. Debido a esto, si “Patch Remain” de su generador de sonido está ajustado en “ON,” es posible que la porción de desvanecimiento del patch que suene en ese momento siga sonando incluso después de haber cambiado a otro patch.
- * Algunos de los patches utilizan formas de onda de la serie SR-JV80. Por ello, es posible que el registro agudo del teclado no suene debido a los límites de gama de teclas.
- * Vea el manual del usuario de su instrumento para obtener instrucciones específicas sobre cómo hacer sonar los Patches de la Placa de Ampliación.
- * En los instrumentos de la serie Fantom/XV, no podrá seleccionar los patches diseñados para utilizar con el RD-700.

Lista de Patches (3)

Para el RD-700

(SELECCIÓN DE BANCO MSB : 93; LSB : 7 [N°001-128], LSB : 8 [N°129-256], LSB : 9 [N°257-384], LSB;10 [N°385-449])

Nº	Nombre	Voces	Categoría
1	WarmVlns SRX	3	STRINGS
2	Legato Vlns	8	STRINGS
3	NaturalVlnsS	2	STRINGS
4	Agitato Vlns	4	STRINGS
5	Vlns-Spc /	4	STRINGS
6	Vi&Va Spicct	4	STRINGS
7	Arco Vas SRX	2	STRINGS
8	Agitato Vas	4	STRINGS
9	Vlas-Spc /	4	STRINGS
10	Marc Vas SRX	2	STRINGS
11	Vc Sec mf	4	STRINGS
12	Fast Cellos	4	STRINGS
13	Vcs Legato	1	STRINGS
14	3 Cellos	3	STRINGS
15	Cellos	3	STRINGS
16	CelloSectMrc	4	STRINGS
17	Marcato Vcs	3	STRINGS
18	Agitato Vcs	4	STRINGS
19	Vcs+Cbs SRX	2	STRINGS
20	Arco Vcs+Cbs	8	STRINGS
21	Thick Bases	2	STRINGS
22	Cb Sect SRX	4	STRINGS
23	WideBasses S	1	STRINGS
24	Agitato Cbs	4	STRINGS
25	BIG StrgEns	4	STRINGS
26	Big Strings2	4	STRINGS
27	Orch p	2	STRINGS
28	Orch p>f / Mod	4	STRINGS
29	StrsArco SRX	4	STRINGS
30	StrSwel / ModS	4	STRINGS
31	StStrOrcp / fS	2	STRINGS
32	SlowResinStr	4	STRINGS
33	Adagio Strs	4	STRINGS
34	LegatoStrngs	8	STRINGS
35	Intim StrSec	4	STRINGS
36	DramaStrsSRX	4	STRINGS
37	St Str p / f	4	STRINGS
38	SlowEpic Str	8	STRINGS
39	Real Strings	2	STRINGS
40	4Seasons SRX	4	STRINGS
41	VlVaVcCb SRX	4	STRINGS
42	StudioString	4	STRINGS
43	Quartet SRX	4	STRINGS
44	VibSwStrings	4	STRINGS
45	Str Swell	4	STRINGS
46	OuvertureSRX	4	STRINGS
47	Cluster Sect	8	STRINGS
48	Velo Str SRX	4	STRINGS
49	Agitato to 0	5	STRINGS
50	DynaMarc SRX	4	STRINGS
51	VivaceStrSRX	4	STRINGS
52	Agitato STR	4	STRINGS
53	STR SpiccSRX	3	STRINGS
54	StacctoSectn	6	STRINGS
55	Spicc / releas	4	STRINGS
56	STR Marcato	2	STRINGS
57	Big Marcato!	4	STRINGS
58	Spicc Sect	6	STRINGS
59	Spc+Pz / rleas	4	STRINGS
60	Piz-Spc /	6	STRINGS
61	RoomPizz SRX	4	STRINGS
62	Stage Pizz	4	STRINGS
63	Nite Pizzico	5	STRINGS
64	VIOLIN solo	2	STRINGS
65	Solo Vln /	2	STRINGS
66	Solo Violin	1	STRINGS
67	Sad S.VlnSRX	2	STRINGS
68	Solo Viola	1	STRINGS
69	AgitatoVaSRX	2	STRINGS
70	Solo Cello 1	1	STRINGS
71	Solo Cello 2	1	STRINGS
72	The V Cello	2	STRINGS
73	Solo Vc /	2	STRINGS
74	Marcato Vc	1	STRINGS
75	Vln&Vcl	2	STRINGS
76	Solo Cb /	2	STRINGS
77	Tape Orc SRX	3	STRINGS
78	Tape Str SRX	6	STRINGS
79	Old Tale	2	STRINGS
80	Mellow Tape	2	STRINGS
81	Crystalline Pd	8	STRINGS
82	SynStrings	3	STRINGS
83	Full Orc SRX	4	ORCHESTRA
84	St.OrcUniSRX	2	ORCHESTRA
85	OrchUnif SRX	4	ORCHESTRA
86	GRAND OrcSRX	3	ORCHESTRA
87	WavinGoodbye	4	ORCHESTRA
88	DynOrchestr1	5	ORCHESTRA
89	Pathetique	5	ORCHESTRA
90	Oboes & Sect	6	ORCHESTRA

Nº	Nombre	Voces	Categoría
91	SlowEpicOrch	8	ORCHESTRA
92	Grand Tutti	5	ORCHESTRA
93	Ultimate Orc	5	ORCHESTRA
94	SuspenceOrch	3	ORCHESTRA
95	Tremolo /	1	ORCHESTRA
96	TremOrc / Mod	2	ORCHESTRA
97	ORC full+BD	5	ORCHESTRA
98	Finally Orch	4	ORCHESTRA
99	Orch & Choir	7	ORCHESTRA
100	NowWeAreFree	4	ORCHESTRA
101	Too Tense	6	ORCHESTRA
102	Orchestr1SRX	6	ORCHESTRA
103	DynOrchestr2	5	ORCHESTRA
104	GiantOrchest	6	ORCHESTRA
105	Strngs&Horns	4	ORCHESTRA
106	Full Orch. 1	2	ORCHESTRA
107	Full Orch. 2	4	ORCHESTRA
108	Full Orch. 3	4	ORCHESTRA
109	End Titles	4	ORCHESTRA
110	HornStrs SRX	4	ORCHESTRA
111	SRX Full Orc	5	ORCHESTRA
112	Harp & Flute	2	ORCHESTRA
113	Celesta&Flt	3	ORCHESTRA
114	ProkofievSRX	3	ORCHESTRA
115	MassInCeeSRX	6	ORCHESTRA
116	PentatnicSRX	1	ORCHESTRA
117	DawnSynphony	4	ORCHESTRA
118	Bad Ending	7	ORCHESTRA
119	Epic Ending	8	ORCHESTRA
120	Catwalk	5	HIT&STAB
121	OrchStaccato	4	HIT&STAB
122	Staccato SRX	2	HIT&STAB
123	OrchHitStack	4	HIT&STAB
124	Dynam Hit	5	HIT&STAB
125	MondoHit SRX	4	HIT&STAB
126	OrchHit SRX	4	HIT&STAB
127	OrcHitMajSRX	2	HIT&STAB
128	OrcHitMinSRX	2	HIT&STAB
129	OrcHitDimSRX	2	HIT&STAB
130	Big Hit Maj1	3	HIT&STAB
131	Big Hit Maj2	4	HIT&STAB
132	Big Hit Min	4	HIT&STAB
133	Big Hit Dim	4	HIT&STAB
134	Sfz! Hit-Maj	5	HIT&STAB
135	Sfz! Hit-Min	5	HIT&STAB
136	Suspense	2	HIT&STAB
137	Hit / Off-Maj	7	HIT&STAB
138	Trem Hit-Maj	5	HIT&STAB
139	Trem Hit-Min	5	HIT&STAB
140	Trem Hit-Dim	5	HIT&STAB
141	Orc / Prc 5-1^	4	HIT&STAB
142	Drama Stab	7	HIT&STAB
143	Maj Concern	8	HIT&STAB
144	OrcGlsMajSRX	1	HIT&STAB
145	OrcGlsMinSRX	1	HIT&STAB
146	Harp Up Hit	4	HIT&STAB
147	Harp Dn Hit	4	HIT&STAB
148	BrassStabSRX	4	HIT&STAB
149	Finale	5	HIT&STAB
150	Tuned HIT	3	HIT&STAB
151	YourMissionS	4	HIT&STAB
152	Big Hit SRX	4	HIT&STAB
153	HorrorHitSRX	4	HIT&STAB
154	Perc Hit	4	HIT&STAB
155	BrassFallSRX	2	HIT&STAB
156	Tp Fall	1	HIT&STAB
157	BrsStacc SRX	1	HIT&STAB
158	Finale SRX /	3	HIT&STAB
159	Orch Piccolo	2	FLUTE
160	Picc Vel Tr	1	FLUTE
161	Piccolo Trio	3	FLUTE
162	Orch Flute	1	FLUTE
163	Vibra Flute	1	FLUTE
164	FluteAtm / Aft	2	FLUTE
165	Picc / Fl 8va	3	FLUTE
166	Double Flute	1	FLUTE
167	Fl / EH Usn	4	FLUTE
168	Calliope SRX	4	FLUTE
169	DynoCelt SRX	2	FLUTE
170	Ethnic Flute	1	FLUTE
171	AmbiFluteSRX	2	FLUTE
172	T.WhistleDly	1	FLUTE
173	TinWhistle	1	FLUTE
174	Sop Recorder	1	FLUTE
175	Tnr Recorder	1	FLUTE
176	Whistle SRX	2	FLUTE
177	Solo Clari	1	WIND
178	Unison Clari	2	WIND
179	Orch Clar	2	WIND
180	Bs Clairenet	1	WIND

Nº	Nombre	Voces	Categoría
181	Orch Bs Clar	2	WIND
182	Cl / Bs Cl 8va	4	WIND
183	Fl / Cl Usn	3	WIND
184	Fl / Cl 8va	3	WIND
185	Orch Oboe	2	WIND
186	Sweet Oboe	1	WIND
187	Cor Oboe	1	WIND
188	OBOE Solo	1	WIND
189	2 Close Oboe	3	WIND
190	Orch Eng Hrn	2	WIND
191	Horn'o U.K.	1	WIND
192	Orch Bassoon	2	WIND
193	Bassoon III	1	WIND
194	BassFoons	3	WIND
195	Cl / Bsn Usn	4	WIND
196	Cl / Bsn 8va	4	WIND
197	Fl / Ob Usn	3	WIND
198	Fl / EH 8va	4	WIND
199	Fl / Bsn 8va	3	WIND
200	BsCl / Bsn 8vb	4	WIND
201	BsCl / Bsn Usn	4	WIND
202	Cl / Hrn / Bsn 1	6	WIND
203	Cl / Hrn / Bsn 2	6	WIND
204	Ob / Hrns / Bsns	6	WIND
205	Ob / Bsn 8va	3	WIND
206	Ob / EH Usn	4	WIND
207	Ob / EH 8va	4	WIND
208	EH / Bsn Usn	4	WIND
209	EH / Bsn 8va	4	WIND
210	EH / Cl Usn	4	WIND
211	EH / Bs Cl 8va	3	WIND
212	Ob / Cl Usn	3	WIND
213	Ob / BsCl 15va	3	WIND
214	Hrns / Bsns	6	WIND
215	Really Reeds	4	WIND
216	Reed Duet	2	WIND
217	Multi Reeds	3	WIND
218	Medieval Rds	3	WIND
219	ScottishPIPE	1	WIND
220	Hill&Sheeps	2	ETHNIC
221	HilndChr SRX	1	ETHNIC
222	Solo Fr.Horn	1	AC.BRASS
223	SoloF.HrnSRX	1	AC.BRASS
224	HrnAccompSRX	2	AC.BRASS
225	Orch Hrns Sw	5	AC.BRASS
226	Hornz Stereo	2	AC.BRASS
227	Orch Hrns ff	3	AC.BRASS
228	FizzHorns ff	3	AC.BRASS
229	Fr.Horns SRX	3	AC.BRASS
230	Dynamic Hrns	2	AC.BRASS
231	Horn Sect /	2	AC.BRASS
232	Fr.HrnSfzSRX	2	AC.BRASS
233	MuteFr.Horns	2	AC.BRASS
234	F.Horn Rip	2	AC.BRASS
235	Trumpet Plus	1	AC.BRASS
236	Natural Tmpt	1	AC.BRASS
237	Real Tp SRX	1	AC.BRASS
238	El Bono SRX	2	AC.BRASS
239	Coronet	1	AC.BRASS
240	Flugelhorn	1	AC.BRASS
241	Mute Tp SRX	1	AC.BRASS
242	HrmnMute SRX	1	AC.BRASS
243	WahMute / Mod	2	AC.BRASS
244	Trumpeters	4	AC.BRASS
245	Tp Ens SRX	3	AC.BRASS
246	Trumps fff!!	4	AC.BRASS
247	Softy Bones	4	AC.BRASS
248	Bone Fluegal	2	AC.BRASS
249	Natural Tbn	1	AC.BRASS
250	Trombone SRX	1	AC.BRASS
251	SoloTb SRX 1	1	AC.BRASS
252	SoloTb SRX 2	1	AC.BRASS
253	Bs Tb	1	AC.BRASS
254	Tbn One	1	AC.BRASS
255	Bone Boys	4	AC.BRASS
256	Bones sectn	4	AC.BRASS
257	BigBones SRX	4	AC.BRASS
258	BsBoneScsSRX	3	AC.BRASS
259	Noblesse	3	AC.BRASS
260	Brass Choral	3	AC.BRASS
261	BrassEns / Mod	4	AC.BRASS
262	Small Brass	4	AC.BRASS
263	Brass Orche	4	AC.BRASS
264	Switch Fall	2	AC.BRASS
265	4-Pc Brs Scn	4	AC.BRASS
266	BiggieBrsSRX	4	AC.BRASS
267	SoloTuba SRX	2	AC.BRASS
268	Tuba sfz / Mod	3	AC.BRASS
269	Tuba SRX	2	AC.BRASS
270	Medieval Brs	4	AC.BRASS

Lista de Patches (4)

Para el RD-700

(SELECCIÓN DE BANCO MSB : 93; LSB : 7 [N°001-128], LSB : 8 [N°129-256], LSB ; 9 [N°257-384], LSB;10 [N°385-449])

Nº	Nombre	Voces	Categoría
271	Full Brass	4	AC.BRASS
272	Brass ff	2	AC.BRASS
273	Brass Sect /	4	AC.BRASS
274	Multi Sax	2	SAX
275	St.EuroPiano	4	AC.PIANO
276	JoyoClassics	2	AC.PIANO
277	Empathy	3	AC.PIANO
278	Piano & Strs	6	AC.PIANO
279	Pno Concerto	6	AC.PIANO
280	Song Wish	6	AC.PIANO
281	HpsFrntSRX 1	3	KEYBOARDS
282	HpsFrntSRX 2	2	KEYBOARDS
283	HpsFrntSRX 3	1	KEYBOARDS
284	HpsBackSRX 1	4	KEYBOARDS
285	HpsBackSRX 2	2	KEYBOARDS
286	HpsBackSRX 3	2	KEYBOARDS
287	Hps F / B SRX	3	KEYBOARDS
288	Hps F4 / B SRX	3	KEYBOARDS
289	Hps F / B / B4 S	4	KEYBOARDS
290	HpsLuteSRX 1	4	KEYBOARDS
291	HpsLute 2	2	KEYBOARDS
292	HpsLute 3	2	KEYBOARDS
293	FullHarpsi 1	3	KEYBOARDS
294	FullHarpsi 2	3	KEYBOARDS
295	Continuo Pdl	2	KEYBOARDS
296	Celesta SRX	2	KEYBOARDS
297	MusicBellSRX	2	BELL
298	Water Mallet	3	BELL
299	Newborn	4	BELL
300	Victoriana 1	3	BELL
301	St.M.Box SRX	2	BELL
302	Victoriana 2	3	BELL
303	ChurchBellS1	2	BELL
304	BlfryChm SRX	4	BELL
305	ChurchBellS2	3	BELL
306	Tub.Bells S1	2	BELL
307	Tub.Bells S2	1	BELL
308	BsMarimbSRX1	2	MALLET
309	BsMarimbSRX2	1	MALLET
310	MultiMallets	3	MALLET
311	Glocken	1	MALLET
312	Glockeneste	3	MALLET
313	GlocklstSRX	2	MALLET
314	Clear Glock	1	MALLET
315	Xylorimba	2	MALLET
316	Xylophone S1	2	MALLET
317	Xylophone S2	1	MALLET
318	Mallet Stack	4	MALLET
319	OrgFlutes S1	3	ORGAN
320	OrgFlutes S2	4	ORGAN
321	OrgFlutes S3	2	ORGAN
322	OrgFlute 8'S	1	ORGAN
323	Psyche Pipes	2	ORGAN
324	ChrchPipes S	4	ORGAN
325	Organ&Recdr	4	ORGAN
326	Early Harmn	5	ORGAN
327	CathedralSRX	4	ORGAN
328	Harmonium	2	ORGAN
329	ChurchOrgSRX	4	ORGAN
330	OrganChrdSRX	4	ORGAN

Nº	Nombre	Voces	Categoría
331	Musaccordion	5	ACCORDION
332	Mystery Pad	4	PULSATING
333	Psychedelic1	4	SYNTH FX
334	Psychedelic2	4	SYNTH FX
335	Eylsium m7^	6	SYNTH FX
336	Eylsium 9th^	6	SYNTH FX
337	Eylsium +7^	6	SYNTH FX
338	Eylsium b9^	6	SYNTH FX
339	Vln RunUp Mj	8	SYNTH FX
340	Vln RunUp Mn	8	SYNTH FX
341	Vln RunDn Mj	8	SYNTH FX
342	Vln RunDn Mn	8	SYNTH FX
343	Maj / MinHarps	2	SYNTH FX
344	9th / b9 Harps	2	SYNTH FX
345	Harp m7 SRX	1	SYNTH FX
346	Harp 9th SRX	1	SYNTH FX
347	Harp +7 SRX	1	SYNTH FX
348	Harp b9 SRX	1	SYNTH FX
349	Harp m7ScSRX	4	SYNTH FX
350	Harp9thScrlS	4	SYNTH FX
351	Harp +7ScSRX	4	SYNTH FX
352	Harpb9ScSRX	4	SYNTH FX
353	Cluster Gong	4	SYNTH FX
354	Sus.Perc Hit	4	SYNTH FX
355	Prc Ens6-Maj	5	SYNTH FX
356	Prc Ens7-Min	5	SYNTH FX
357	Prc Ens8-Dim	5	SYNTH FX
358	Cluster SRX	1	SYNTH FX
359	HorrorClustr	2	SYNTH FX
360	Hell Section	4	SYNTH FX
361	Legettimare	7	SYNTH FX
362	Limbus SRX	2	SYNTH FX
363	Backword	8	SYNTH FX
364	Dreamseq SRX	4	SYNTH FX
365	Midnight SRX	4	SYNTH FX
366	Colombus SRX	4	SYNTH FX
367	Once Upon A	5	OTHER SYNTH
368	Desert Dream	4	OTHER SYNTH
369	AncientTimes	5	OTHER SYNTH
370	Tension SRX	5	OTHER SYNTH
371	Wreck	6	BRIGHT PAD
372	Eclipse SRX	4	BRIGHT PAD
373	PulsingVox S	3	BRIGHT PAD
374	SynthStr.Pad	2	SOFT PAD
375	Meditate PAD	4	SOFT PAD
376	Choir	3	VOX
377	Angelic Pad	4	VOX
378	BoysChoirSRX	1	VOX
379	Sing! / Mod	6	VOX
380	SmockyVoces	2	VOX
381	Smooth Choir	5	VOX
382	X.. Vox SRX	3	VOX
383	RealChoirSRX	4	VOX
384	StChrMm / Ah S	4	VOX
385	Mmms & Aaahs	2	VOX
386	Choir / Mod	4	VOX
387	Close Mouths	1	VOX
388	Voice Stax	7	VOX
389	MorphieChoir	6	VOX
390	Morph4Choir	8	VOX

Nº	Nombre	Voces	Categoría
391	17th Movemnt	6	VOX
392	Matins	2	VOX
393	Quartet II 5	4	VOX
394	Scat /	2	VOX
395	Scatmen! SRX	1	VOX
396	The Voices	2	VOX
397	VocalCollect	2	VOX
398	GregorianCho	4	VOX
399	Soprano&co.	2	VOX
400	Tenor solo	1	VOX
401	ClarsahHarpS	1	PLUCKED
402	Heavens Harp	5	PLUCKED
403	C.Hrp / padSRX	4	PLUCKED
404	PhaseClarsah	4	PLUCKED
405	ClearHarpSRX	2	PLUCKED
406	Nails Harp	2	PLUCKED
407	Harp SRX	1	PLUCKED
408	Natural Harp	1	PLUCKED
409	Warm Harp	1	PLUCKED
410	Bousouk&Harp	4	PLUCKED
411	Etheral Lute	4	PLUCKED
412	DelicateCOMB	3	PLUCKED
413	St.CymblnSRX	2	PLUCKED
414	CymblnDuoSRX	2	PLUCKED
415	Bohemian SRX	3	PLUCKED
416	Bousouki Pic	2	PLUCKED
417	Bousouki	1	PLUCKED
418	PulcinelaSRX	4	PLUCKED
419	SN Roll SRX /	3	PERCUSSION
420	Perc Ens 1^	3	PERCUSSION
421	Perc Ens 2^	4	PERCUSSION
422	Perc Ens 3^	6	PERCUSSION
423	Perc Ens 4^	6	PERCUSSION
424	Perc Ens 5^	5	PERCUSSION
425	Orch Percs	4	PERCUSSION
426	BodhranSplit	1	PERCUSSION
427	BodhranVel S	3	PERCUSSION
428	CrazyBodhrnS	1	PERCUSSION
429	BodhranMenuS	1	PERCUSSION
430	Perc Mix SRX	2	PERCUSSION
431	MassiveTimpa	4	PERCUSSION
432	4-way Timps	3	PERCUSSION
433	DynaTimpsSRX	2	PERCUSSION
434	TimpaniRoll1	4	PERCUSSION
435	TimpaniRoll2	4	PERCUSSION
436	MultiTimpani	1	PERCUSSION
437	Roll > Klang	5	PERCUSSION
438	Timpani /	2	PERCUSSION
439	Big Orc.Perc	3	PERCUSSION
440	WindChimeSRX	1	PERCUSSION
441	FingerCymSRX	1	PERCUSSION
442	ConcertBDSRX	3	PERCUSSION
443	BD Roll SRX /	2	PERCUSSION
444	Tam Tam SRX	2	PERCUSSION
445	Piatti!! SRX	2	PERCUSSION
446	SleighBellsS	1	PERCUSSION
447	SlapstickS /	2	PERCUSSION
448	TambourineS /	2	PERCUSSION
449	CastanetsS /	1	PERCUSSION

^ : Acento
/ : Variación del sonido obtenida con Key Velocity
/ Mod : Variación del sonido obtenida con (CC:01)
/ Aft : Variación del sonido obtenida con (CC:97)

- * Con algunos tones, el tempo puede cambiar repentinamente o puede haber ruido. Esto ocurre cuando se sincroniza el tempo, por ejemplo, a los tiempos de multiefectos o de chorus delay. Si el ruido se vuelve apreciable, modifique los valores de tiempo de delay para que no correspondan con el pulso (RD-700 Manual del Usuario; p. 76–79).
- * Algunos de los patches utilizan formas de onda de la serie SR-JV80. Por ello, es posible que el registro agudo del teclado no suene debido a los límites de gama de teclas.
- * En los instrumentos de la serie RD-700, no podrá seleccionar los patches diseñados para utilizar con el Fantom/XV.

Lista de Sets de Percusión

Para Todos los Instrumentos

(SELECCIÓN DE BANCO MSB: 92; LSB: 7)

Nº	Nombre de Set de Percusión
1	Orch. Kit 1
2	Orch. Kit 2

Nº	Nombre de Set de Percusión
3	Melo OrchKit
4	GM AssignKit

Nº	Nombre de Set de Percusión
5	All Orch Kit

Asignación de Tecla de Set de Percusión (1)

Para la Serie /Fantom/XV

Nº de Nota	1. Orch. Kit 1	2. Orch. Kit 2	3. Melo OrchKit	4. GM AssignKit	5. All Orch Kit
26	--	--	--	--	--
27	--	--	--	Close HiHat2	--
28	--	--	--	Pedal HiHat2	TubularBells
29	--	--	--	Open HiHat2	Tubular 2
30	--	--	--	Ride Cymbal	Church Bells
31	--	--	--	SticksSide	ChurchBell 2
32	--	--	--	R8 Click	JingleBell 2
33	--	--	--	Metronome 2	Sleigh Bell
34	--	--	--	Metronome 1	Tambourine
35	BD Roll	BD Roll	BD Roll	Concert BD	Wind Chime 2
36	Orch BD	Concert BD 3	Orch BD	ConcertBD Mt	Wind Chime 3
37	Concert BD 1	Concert BD 2	Concert BD 1	Side Stick	Mute Triangl
38	OrchSnr Roll	OrchSnr Roll	OrchSnr Roll	Concert Snr	Open Triangl
39	Orch Snr	Concert Snr2	Orch Snr	Castanets	Finger Cym 2
40	Snr Roll	Snr Roll	Snr Roll	Concert Snr	Crash Cymbal
41	Concert Snr1	Concert Snr3	Concert Snr2	Timpani	Cymbal Hit
42	Timpani 2	Timpani	Concert Snr3	Timpani	MalletCymbal
43	Timpani 2	Timpani	Timpani 2	Timpani	CymbalScape
44	Timpani 2	Timpani	Timpani 2	Timpani	Gong
45	Timpani 2	Timpani	Timpani 2	Timpani	Tam Tam
46	Timpani 2	Timpani	Timpani 2	Timpani	Grongkas
47	Timpani 2	Timpani	Timpani 2	Timpani	OrchPrc Hit
48	Timpani 2	Timpani	Timpani 2	Timpani	Perc Hit 2
49	Timpani 2	Timpani	Timpani 2	Timpani	Perc Hit 1
50	Timpani 2	Timpani	Timpani 2	Timpani	Castanets 1
51	Timpani 2	Timpani	Timpani 2	Timpani	Castanets 2
52	Timpani 2	Timpani	Timpani 2	Timpani	TunedBlock A
53	Timpani 2	Timpani	Timpani 2	Timpani	Slapstick
54	Crash Cymbal	Crash Cymbal	Timpani	Tambourine	Ratchet
55	Cymbal Hit	Cymbal Hit	Timpani	Splash Cym	Concert BD 1
56	MalletCymbal	MalletCymbal	Timpani	Cowbell	Concert BD 2
57	CymbalScape	CymbalScape	Timpani	Con.Cymbal2	Concert BD 3
58	Gong	Gong	Timpani	Vibraslap	Orch BD
59	Tam Tam	Tam Tam	Timpani	Concert Cym	BD Roll
60	Grongkas	Grongkas	Timpani	Bongo High	Concert Snr1
61	OrchPrc Hit	OrchPrc Hit	Timpani	Bongo Low	Concert Snr2
62	Perc Hit 2	Perc Hit 2	Timpani	Mute H.Conga	Concert Snr3
63	Finger Cym 2	Finger Cym 2	Timpani	Conga Hi Opn	Orch Snr
64	Wind Chime 2	Wind Chime 2	Timpani	Conga Lo Opn	OrchSnr Roll
65	Wind Chime 3	Wind Chime 3	Timpani	High Timbale	Snr Roll
66	JingleBell 2	JingleBell 2	Timpani	Low Timbale	Orch Hit Dim
67	Sleigh Bell	Sleigh Bell	BoysAleluia	Agogo High	Orch Hit Maj
68	TubularBells	TubularBells	Boys Amen 1	Agogo Low	Orch Hit Min
69	Tubular 2	Tubular 2	Boys Amen 2	Cabasa	Orch Hit Maj
70	Church Bells	Church Bells	Amen	Maracas	Orch Hit Min
71	ChurchBell 2	ChurchBell 2	Alluia	ShortWhistle	Orch Hit Dim
72	Mute Triangl	Mute Triangl	Tenor	Long Whistle	Orch Hit f
73	Open Triangl	Open Triangl	Tubular 2	Short Guiro	OrchestraHit
74	TunedBlockHi	Bodhran 1	Tubular 2	Long Guiro	Staccato p
75	TunedBlockLo	Bodhran 2	Tubular 2	Claves	Staccato f
76	Tambourine	Bodhran 3	Tubular 2	Woodblock H	Gliss Maj
77	Castanets 1	Bodhran 4	Tubular 2	Woodblock L	Gliss Min
78	Castanets 2	Bodhran 5	Tubular 2	Mute Cuica	Tremolo p
79	Slapstick	Bodhran 6	Tubular 2	Open Cuica	Tremolo sfz
80	Ratchet	Bodhran 7	Tubular 2	MuteTriangl	Tremolo f
81	Perc Hit 1	Timpani	Tubular 2	OpenTriangl	Pentatonic
82	Timp Roll p	Timp Roll p	Tubular 2	ShakerCabasa	Gliss Maj Lp
83	Timp Roll f	Timp Roll f	Tubular 2	Jingle Bell	Gliss Min Lp
84	F.Horn Rip	Brass Stacc	TubularBells	Bell Tree	Cluster
85	Harp Maj Up	Orch Hit Dim	TubularBells	Castanets	F.Horn Rip
86	Harp Maj Dwn	Orch Hit Maj	TubularBells	Mute Surdo	Brass Fall
87	Harp m7 Up	Orch Hit Min	TubularBells	Open Surdo	Tps Fall
88	Harp m7 Dwn	Orch Hit Maj	TubularBells	Applause	Brass Stacc
89	Harp 9th Up	Orch Hit Min	TubularBells	--	Timpani
90	Harp 9th Dwn	Orch Hit Dim	TubularBells	--	Timpani p
91	Harp +7 Up	Orch Hit f	TubularBells	--	Timpani 2 p
92	Harp +7 Dwn	OrchestraHit	TubularBells	--	Timp Roll f
93	Harp b9 Up	Pentatonic	TubularBells	--	Timp Roll p
94	Harp b9 Dwn	Cluster	TubularBells	--	Harp Maj Up
95	Applause	Applause	TubularBells	--	Harp Maj Dwn
96	Metronome 2	Metronome 2	Metronome 2	--	Harp m7 Up
97	R8 Click	R8 Click	R8 Click	--	Harp m7 Dwn
98	Metronome 1	Metronome 1	Metronome 1	--	Harp 9th Up
99	--	--	--	--	Harp 9th Dwn
100	--	--	--	--	Harp +7 Up
101	--	--	--	--	Harp +7 Dwn
102	--	--	--	--	Harp b9 Up
103	--	--	--	--	Harp b9 Dwn

* En la serie Fantom/XV, no podrá seleccionar los sets de percusión diseñados para utilizarse con el RD-700.

Asignación de Tecla de Set de Percusión (2)

Para el RD-700

Nº de Nota	1. Orch. Kit 1	2. Orch. Kit 2	3. Melo OrchKit	4. GM AssignKit	5. All Orch Kit
26	--	--	--	--	--
27	--	--	--	--	TubularBells
28	--	--	--	--	Tubular 2
29	--	--	--	--	Church Bells
30	--	--	--	--	ChurchBell 2
31	--	--	--	--	JingleBell 2
32	--	--	--	--	Sleigh Bell
33	--	--	--	--	Tambourine
34	BD Roll	BD Roll	BD Roll	Concert BD	Wind Chime 2
35	Orch BD	Concert BD 3	Orch BD	ConcertBD.Mt	Wind Chime 3
C36	Concert BD 1	Concert BD 2	Concert BD 1	--	Mute Triangl
37	OrchSnr Roll	OrchSnr Roll	OrchSnr Roll	Concert Snr	Open Triangl
38	Orch Snr	Concert Snr2	Orch Snr	Castanets	Finger Cym 2
39	Snr Roll	Snr Roll	Snr Roll	Concert Snr	Crash Cymbal
40	Concert Snr1	Concert Snr3	Concert Snr2	Timpani	Cymbal Hit
41	Timpani 2	Timpani	Concert Snr3	Timpani	MalletCymbal
42	Timpani 2	Timpani	Timpani 2	Timpani	CymbalScrape
43	Timpani 2	Timpani	Timpani 2	Timpani	Gong
44	Timpani 2	Timpani	Timpani 2	Timpani	Tam Tam
45	Timpani 2	Timpani	Timpani 2	Timpani	Grongkas
46	Timpani 2	Timpani	Timpani 2	Timpani	OrchPrc Hit
47	Timpani 2	Timpani	Timpani 2	Timpani	Perc Hit 2
C48	Timpani 2	Timpani	Timpani 2	Timpani	Perc Hit 1
49	Timpani 2	Timpani	Timpani 2	Timpani	Castanets 1
50	Timpani 2	Timpani	Timpani 2	Timpani	Castanets 2
51	Timpani 2	Timpani	Timpani 2	Timpani	TunedBlock A
52	Timpani 2	Timpani	Timpani 2	Timpani	Slapstick
53	Timpani 2	Timpani	Timpani 2	Tambourine	Ratchet
54	Crash Cymbal	Crash Cymbal	Timpani	--	Concert BD 1
55	Cymbal Hit	Cymbal Hit	Timpani	--	Concert BD 2
56	MalletCymbal	MalletCymbal	Timpani	Con.Cymbal2	Concert BD 3
57	CymbalScrape	CymbalScrape	Timpani	--	Orch BD
58	Gong	Gong	Timpani	Concert Cym	BD Roll
59	Tam Tam	Tam Tam	Timpani	--	Concert Snr1
C60	Grongkas	Grongkas	Timpani	--	Concert Snr2
61	OrchPrc Hit	OrchPrc Hit	Timpani	--	Concert Snr3
62	Perc Hit 2	Perc Hit 2	Timpani	--	Orch Snr
63	Finger Cym 2	Finger Cym 2	Timpani	--	OrchSnr Roll
64	Wind Chime 2	Wind Chime 2	Timpani	--	Snr Roll
65	Wind Chime 3	Wind Chime 3	Timpani	--	Orch Hit Dim
66	JingleBell 2	JingleBell 2	Timpani	--	Orch Hit Maj
67	Sleigh Bell	Sleigh Bell	BoysAleluial	--	Orch Hit Min
68	TubularBells	TubularBells	Boys Amen 1	--	Orch Hit Maj
69	Tubular 2	Tubular 2	Boys Amen 2	--	Orch Hit Min
70	Church Bells	Church Bells	Amen	--	Orch Hit Dim
71	ChurchBell 2	ChurchBell 2	Alluia	--	Orch Hit f
C72	Mute Triangl	Mute Triangl	Tenor	--	OrchestraHit
73	Open Triangl	Open Triangl	Tubular 2	--	Staccato p
74	TunedBlockHi	Bodhran 1	Tubular 2	--	Staccato f
75	TunedBlockLo	Bodhran 2	Tubular 2	Woodblock H	Gliss Maj
76	Tambourine	Bodhran 3	Tubular 2	Woodblock L	Gliss Min
77	Castanets 1	Bodhran 4	Tubular 2	--	Tremolo p
78	Castanets 2	Bodhran 5	Tubular 2	--	Tremolo sfz
79	Slapstick	Bodhran 6	Tubular 2	MuteTriangl	Tremolo f
80	Ratchet	Bodhran 7	Tubular 2	OpenTriangl	Pentatonic
81	Perc Hit 1	Timpani	Tubular 2	--	Gliss Maj Lp
82	Timp Roll p	Timp Roll p	Tubular 2	Jingle Bell	Gliss Min Lp
83	Timp Roll f	Timp Roll f	Tubular 2	--	Cluster
C84	F.Horn Rip	Brass Stacc	TubularBells	Castanets	F.Horn Rip
85	Harp Maj Up	Orch Hit Dim	TubularBells	--	Brass Fall
86	Harp Maj Dwn	Orch Hit Maj	TubularBells	--	Tps Fall
87	Harp m7 Up	Orch Hit Min	TubularBells	--	Brass Stacc
88	Harp m7 Dwn	Orch Hit Maj	TubularBells	--	Timpani
89	Harp 9th Up	Orch Hit Min	TubularBells	--	Timpani p
90	Harp 9th Dwn	Orch Hit Dim	TubularBells	--	Timpani 2 p
91	Harp +7 Up	Orch Hit f	TubularBells	--	Timp Roll f
92	Harp +7 Dwn	OrchestraHit	TubularBells	--	Timp Roll p
93	Harp b9 Up	Pentatonic	TubularBells	--	Harp Maj Up
94	Harp b9 Dwn	Cluster	TubularBells	--	Harp Maj Dwn
95	--	--	TubularBells	--	Harp m7 Up
C96	--	--	--	--	Harp m7 Dwn
97	--	--	--	--	Harp 9th Up
98	--	--	--	--	Harp 9th Dwn
99	--	--	--	--	Harp +7 Up
100	--	--	--	--	Harp +7 Dwn
101	--	--	--	--	Harp b9 Up
102	--	--	--	--	Harp b9 Dwn
103	--	--	--	--	--

* En el RD-700, no podrá seleccionar los sets de percusión diseñados para utilizarse con la serie Fantom/XV

Lista de Formas de Onda (1)

Nº	Nombre	Nº	Nombre	Nº	Nombre	Nº	Nombre	Nº	Nombre
1	Strings L pA *	61	VcSolo Vib C	121	Oboe 1	181	Trombone mfA	241	Harp +7 Dwn
2	Strings R pA *	62	Vls Spicc A	122	Oboe 1A	182	Trombone mfB	242	Harp b9 Up
3	Strings L pB *	63	Vls Spicc B	123	Oboe 1B	183	Trombone mfC	243	Harp b9 Dwn
4	Strings R pB *	64	Vls Spicc C	124	Oboe 1C	184	Trombone f A	244	Harp m7 UpLp
5	Strings L pC *	65	Vas Spicc A	125	Oboe 2A	185	Trombone f B	245	Harp m7 DnLp
6	Strings R pC *	66	Vas Spicc B	126	Oboe 2B	186	Trombone f C	246	Harp 9thUpLp
7	Strs L pA Lp *	67	Vas Spicc C	127	Oboe 2C	187	Bass Tb	247	Harp 9thDnLp
8	Strs R pA Lp *	68	Vcs Spicc A	128	Oboe 3 A	188	Tb Sect	248	Harp +7 UpLp
9	Strs L pB Lp *	69	Vcs Spicc B	129	Oboe 3 B	189	Tb Sect Lp	249	Harp +7 DnLp
10	Strs R pB Lp *	70	Vcs Spicc C	130	Oboe 3 C	190	Multi Reed	250	Harp b9 UpLp
11	Strs L pC Lp *	71	Cbs Spicc A	131	Eng.Horn A	191	Uill.Pipe1 A	251	Harp b9 DnLp
12	Strs R pC Lp *	72	Cbs Spicc B	132	Eng.Horn B	192	Uill.Pipe1 B	252	EuroPiano pA
13	Strings L fA *	73	Cbs Spicc C	133	Eng.Horn C	193	Uill.Pipe1 C	253	EuroPiano pB
14	Strings R fA *	74	Multi Spicc	134	Eng.Horn 2 A	194	Uill.Pipe2 A	254	EuroPiano pC
15	Strings L fB *	75	ViSolo Spicc	135	Eng.Horn 2 B	195	Uill.Pipe2 B	255	EuroPiano fA
16	Strings R fB *	76	ViSlSpicc2 A	136	Eng.Horn 2 C	196	Uill.Pipe2 C	256	EuroPiano fB
17	Strings L fC *	77	ViSlSpicc2 B	137	Bassoon	197	U.Pipe Orn A	257	EuroPiano fC
18	Strings R fC *	78	ViSlSpicc2 C	138	Bassoon 1	198	U.Pipe Orn B	258	Ac Piano1 A
19	Strs L fA Lp *	79	VcSolo Spicc	139	Bassoon 2 A	199	U.Pipe Orn C	259	Piano Thump
20	Strs R fA Lp *	80	MultiSl Spicc	140	Bassoon 2 B	200	F.Horn Solo	260	Piano Up TH
21	Strs L fB Lp *	81	Pizzicato 1	141	Bassoon 2 C	201	F.HornSolo2A	261	Harpsichord
22	Strs R fB Lp *	82	Pizzicato 2	142	Bassoon&Oboe	202	F.HornSolo2B	262	HPS_Front A
23	Strs L fC Lp *	83	STR Attack	143	S_Recorder A	203	F.HornSolo2C	263	HPS_Front B
24	Strs R fC Lp *	84	StrAttack 2A	144	S_Recorder B	204	F.Horn Sect1	264	HPS_Front C
25	Multi STR A	85	StrAttack 2B	145	S_Recorder C	205	F.Horn Sect2	265	HPS_Back A
26	Multi STR B	86	StrAttack 2C	146	T_Recorder A	206	F.Hrn Sc1 Lp	266	HPS_Back B
27	Multi STR C	87	OrchUnisonLA *	147	T_Recorder B	207	F.Hrn Sc2 Lp	267	HPS_Back C
28	Multi STR Lp	88	OrchUnisonRA *	148	T_Recorder C	208	French 1A	268	HPS_Lute A
29	VI Sect A	89	OrchUnisonLB *	149	Tnr.Recorder	209	F.Horns2 pA	269	HPS_Lute B
30	VI Sect B	90	OrchUnisonRB *	150	TinWhistle A	210	F.Horns2 pB	270	HPS_Lute C
31	VI Sect C	91	OrchUnisonLC *	151	TinWhistle B	211	F.Horns2 pC	271	HPS_Click
32	VI Sect Lp	92	OrchUnisonRC *	152	TinWhistle C	212	F.Horns2 pA+	272	Celesta A
33	Va Sect A	93	Full Orch.	153	TinWhisOrn A	213	F.Horns2 pB+	273	Celesta B
34	Va Sect B	94	Full Orch Lp	154	TinWhisOrn B	214	F.Horns2 pC+	274	Celesta C
35	Va Sect C	95	JV Strings L *	155	TinWhisOrn C	215	F.Horns2 fA	275	MusicBox 2 A
36	Va Sect Lp	96	JV Strings R *	156	Whistle 1	216	F.Horns2 fB	276	MusicBox 2 B
37	Vc Sect A	97	JV Strings A	157	Multi Sax 1	217	F.Horns2 fC	277	MusicBox 2 C
38	Vc Sect B	98	JP Strings1A	158	Multi Sax 2	218	F.Horns2 fA+	278	Bass Marimba
39	Vc Sect C	99	JP Strings2A	159	BRS Ensemble	219	F.Horns2 fB+	279	Xylophone
40	Vc Sect Lp	100	Soft Pad A	160	BRS Ens Lp	220	F.Horns2 fC+	280	Glockenspiel
41	Cb Sect	101	Piccolo	161	Brass ff	221	F.Horn Mute	281	Glocken 2 A
42	Cb Sect Lp	102	Piccolo 2 A	162	ff Brass Lp	222	F.Hrn MuteLp	282	Glocken 2 B
43	VI Solo A	103	Piccolo 2 B	163	Trumpet 1A	223	Tuba	283	Glocken 2 C
44	VI Solo B	104	Piccolo 2 C	164	Trumpet 2	224	Tuba 1	284	TubularBells
45	VI Solo C	105	Flute 1A	165	Trumpet 3 A	225	Harp A	285	Tubular 2 A
46	Va Solo A	106	FluteVib2 A	166	Trumpet 3 B	226	Harp B	286	Tubular 2 B
47	Va Solo B	107	FluteVib2 B	167	Trumpet 3 C	227	Harp C	287	Tubular 2 C
48	Va Solo C	108	FluteVib2 C	168	Cornet	228	Harp 2 A	288	Wind Chime 2
49	Vc Solo A	109	Celtic Flt A	169	Tpt Sect. A	229	Harp 2 B	289	Wind Chime 3
50	Vc Solo B	110	Celtic Flt B	170	Flugelhorn	230	Harp 2 C	290	Church Bells
51	Vc Solo C	111	Celtic Flt C	171	HarmonMute2A	231	ClarsahHarpA	291	ChurchBell 2
52	Cb Solo	112	ORG_Flute A	172	HarmonMute2B	232	ClarsahHarpB	292	JingleBell 2
53	Violin&Cello	113	ORG_Flute B	173	HarmonMute2C	233	ClarsahHarpC	293	Sleigh Bell
54	Multi Solo 1	114	ORG_Flute C	174	Solo Tb A	234	Harp Maj Up	294	Bousouki A
55	Multi Solo 2	115	Clarinet	175	Solo Tb B	235	Harp Maj Dn	295	Bousouki B
56	ViSolo Vib A	116	Clarinet 2 A	176	Solo Tb C	236	Harp m7 Up	296	Bousouki C
57	ViSolo Vib B	117	Clarinet 2 B	177	Trombone 1	237	Harp m7 Dwn	297	OrchPrc Hit
58	ViSolo Vib C	118	Clarinet 2 C	178	Trombone 2 A	238	Harp 9th Up	298	OrchestraHit
59	VcSolo Vib A	119	Multi Cla	179	Trombone 2 B	239	Harp 9th Dwn	299	Orch Hit f
60	VcSolo Vib B	120	Bs Clarinet	180	Trombone 2 C	240	Harp +7 Up	300	Orch Hit Maj

Lista de Formas de Onda (2)

Nº Nombre	Nº Nombre	Nº Nombre	Nº Nombre	Nº Nombre
301 Orch Hit Min	351 Gregorian RA *	401 Amen L *	451 Bodhran 1	501 REV VoMenu L * **
302 Orch Hit Dim	352 Gregorian LB *	402 Amen R *	452 Bodhran 2	502 REV VoMenu R * **
303 OrchHit2 Maj	353 Gregorian RB *	403 Aleluia L *	453 Bodhran 3	503 REV ByAleluL *
304 OrchHit2 Min	354 Gregorian LC *	404 Aleluia R *	454 Bodhran 4	504 REV ByAleluR *
305 OrchHit2 Dim	355 Gregorian RC *	405 Breath Wind	455 Bodhran 5	505 REV ByAmen1L *
306 Gliss Maj	356 Sop Chr Mono	406 Breath Atack	456 Bodhran 6	506 REV ByAmen1R *
307 Gliss Min	357 SopranoChr L *	407 Breath Whisl	457 Bodhran 7	507 REV ByAmen2L *
308 Gliss Maj Lp	358 SopranoChr R *	408 Breath Hrmon	458 Perc Hit 1	508 REV ByAmen2R *
309 Gliss Min Lp	359 Tenor Solo	409 Whistle Nz	459 Perc Hit 2	509 REV Amen L *
310 Tremolo p	360 Jazz Doo L A *	410 Flute Breath	460 Perc Set 1	510 REV Amen R *
311 Tremolo f	361 Jazz Doo R A *	411 Vocal Breath	461 Perc Set 2	511 REV AleluiaL *
312 Tremolo sfz	362 Jazz Doo L B *	412 Timpani	462 Perc Set 3	512 REV AleluiaR *
313 Tremolo p Lp	363 Jazz Doo R B *	413 Timpani p	463 REV Hrp m7Up	
314 Tremolo f Lp	364 Jazz Doo L C *	414 Timpani f	464 REV Hrp m7Dn	
315 Tremolo sfLp	365 Jazz Doo R C *	415 Timpani 2 p	465 REV Hrp9thUp	
316 Cluster	366 Jazz Doot LA *	416 Timpani 2 f	466 REV Hrp9thDn	
317 Cluster Lp	367 Jazz Doot RA *	417 Timpani Roll	467 REV Hrp +7Up	
318 Pentatonic	368 Jazz Doot LB *	418 Timp Roll p	468 REV Hrp +7Dn	
319 PentatonicLp	369 Jazz Doot RB *	419 Timp Roll f	469 REV Hrp b9Up	
320 Staccato p	370 Jazz Doot LC *	420 Concert SNR1	470 REV Hrp b9Dn	
321 Staccato f	371 Jazz Doot RC *	421 Concert SNR2	471 REV Hit f	
322 Brass Stacc	372 Jazz Dat L A *	422 Concert SNR3	472 REV Hit Maj	
323 Brass Fall	373 Jazz Dat R A *	423 Orch SNR	473 REV Hit Min	
324 Tps Fall	374 Jazz Dat L B *	424 OrchSNR Roll	474 REV Hit Dim	
325 F.Horn Rip	375 Jazz Dat R B *	425 SNR Roll	475 REV Hit2 Maj	
326 Choir A	376 Jazz Dat L C *	426 SNR Set	476 REV Hit2 Min	
327 Choir B	377 Jazz Dat R C *	427 Concert BD 1	477 REV Hit2 Dim	
328 Choir C	378 Jazz Bap L A *	428 Concert BD 2	478 REV Stacc p	
329 F.Chor Aah A	379 Jazz Bap R A *	429 Concert BD 3	479 REV Stacc f	
330 F.Chor Aah B	380 Jazz Bap L B *	430 Orch BD	480 REV Bell	
331 F.Chor Aah C	381 Jazz Bap R B *	431 BD Roll	481 REV Cym Hit	
332 F.Chor Mmh A	382 Jazz Bap L C *	432 Tam Tam	482 REV PercHit1	
333 F.Chor Mmh B	383 Jazz Bap R C *	433 Crash Cymbal	483 REV PercHit2	
334 F.Chor Mmh C	384 Dow fall L A *	434 Crash Cym Lp	484 REV BD 1	
335 LargeChrL pA *	385 Dow fall R A *	435 Cymbal Hit	485 REV BD 2	
336 LargeChrR pA *	386 Dow fall L B *	436 Finger Cym 2	486 REV BD 3	
337 LargeChrL pB *	387 Dow fall R B *	437 MalletCymbal	487 REV BD Roll	
338 LargeChrR pB *	388 Dow fall L C *	438 CymbalScrape	488 REV SNR 1	
339 LargeChrL pC *	389 Dow fall R C *	439 Gong	489 REV SNR 2	
340 LargeChrR pC *	390 Bass Thum A	440 Grongkas	490 REV SNR 3	
341 LargeChrL fA *	391 Bass Thum B	441 Castanets 1	491 REV Tam Tam	
342 LargeChrR fA *	392 Bass Thum C	442 Castanets 2	492 REV Crash	
343 LargeChrL fB *	393 Vocal Menu L * **	443 Tambourine	493 REV Gong	
344 LargeChrR fB *	394 Vocal Menu R * **	444 Triangle	494 REV Tamb	
345 LargeChrL fC *	395 BoysAleluiaL *	445 Slapstick	495 REV Timp 1	
346 LargeChrR fC *	396 BoysAleluiaR *	446 Ratchet	496 REV Timp 2	
347 Boys Choir A	397 Boys Amen1 L *	447 TunedBlock A	497 REV Casta 1	
348 Boys Choir B	398 Boys Amen1 R *	448 TunedBlock B	498 REV Casta 2	
349 Boys Choir C	399 Boys Amen2 L *	449 TunedBlock C	499 REV S.Stick	
350 Gregorian LA *	400 Boys Amen2 R *	450 Bodhran MENU **	500 REV Sleigh	

* :Se trata de formas de onda estéreo.

** :Son formas de onda de menú. Incluyen formas de onda múltiples asignadas a teclas individualmente.

Al crear un Patch utilizando las formas de onda guardadas en la Placa de Ampliación, observe los siguientes puntos:

- * Si monta un Patch con una voz individual y más tarde lo utiliza para tocar un acorde, el sonido puede distorsionarse según los ajustes de los Efectos y del TVA. Si esto sucede, ajuste el nivel de los Efectos y el TVA.

Este producto utiliza formas de onda de la serie SR-JV80. Por ello, es posible que el registro agudo del teclado no suene debido a los límites de gama de teclas.

Formas de Onda de Menú

393 Vocal Menu L

Tecla N... de Onda	Nombre de Onda
C4 359	Tenor Solo
D4 395	BoysAleluiaL
E4 397	Boys Amen1 L
F4 399	Boys Amen2 L
G4 401	Amen L
A4 403	Aleluia L

394 Vocal Menu R

Tecla N... de Onda	Nombre de Onda
C4 359	Tenor Solo
D4 396	BoysAleluiaR
E4 398	Boys Amen1 R
F4 400	Boys Amen2 R
G4 402	Amen R
A4 404	Aleluia R

450 Bodhran Menu

Tecla N... de Onda	Nombre de Onda
C4 451	Bodhran 1
D4 452	Bodhran 2
E4 453	Bodhran 3
F4 454	Bodhran 4
G4 455	Bodhran 5
A4 456	Bodhran 6
B4 457	Bodhran 7

501 REV VoMenu L

Tecla N... de Onda	Nombre de Onda
C4 503	REV ByAleluL
D4 505	REV ByAmen1L
E4 507	REV ByAmen2L
F4 509	REV Amen L
G4 511	REV AleluiaL
A4	REV Jazz Doot L *
B4	REV Jazz Dat L *
C5	REV Jazz Bap L *
D5	REV Dow fall L *
E5	REV Bass Thum *

502 REV VoMenu R

Tecla N... de Onda	Nombre de Onda
C4 504	REV ByAleluR
D4 506	REV ByAmen1R
E4 508	REV ByAmen2R
F4 510	REV Amen R
G4 512	REV AleluiaR
A4	REV Jazz Doot R *
B4	REV Jazz Dat R *
C5	REV Jazz Bap R *
D5	REV Dow fall R *
E5	REV Bass Thum *

* Utilizadas sólo en formas de onda de menú.

Acerca del Nuevo Formato

Las Placas de Ampliación SRX anteriores eran capaces de almacenar un máximo de 128 Patches. Con el propósito de que sea posible proporcionar una aun mayor variedad de sonidos, se emplea actualmente un nuevo formato (implementado originalmente en el SRX-05). Este nuevo formato es capaz de manejar más de 128 Patches.

Esto significa que, según la versión actual del sistema de su instrumento, es posible que tenga que actualizarla para que sea compatible con este nuevo formato SRX. Compruebe la versión del sistema de su instrumento; si su versión actual es anterior al correspondiente relacionada más abajo, antes de utilizar el SRX-06 utilice el programa de actualización del sistema incluido en el CD-ROM para actualizarla a la versión más reciente.

- **Fantom:** La versión 1.13 o más reciente es compatible con el nuevo formato
 - **XV-5080:** La versión 1.25 o más reciente es compatible con el nuevo formato
 - **XV-3080:** La versión 1.09 o más reciente es compatible con el nuevo formato
 - **XV-88:** La versión 1.08 o más reciente es compatible con el nuevo formato
 - **RD-700:** La versión 1.05 o más reciente es compatible con el nuevo formato
- * *El XV-5050 y el XV-2020 fueron diseñados originalmente para ser compatibles con el nuevo formato y por eso no precisan actualización alguna. Use el programa de actualización en este CD-ROM con las placas de ampliación SRX-01–09.*

Para obtener instrucciones sobre la comprobación de la versión del programa del sistema para cada instrumento y la actualización del software, vea los archivos html para el instrumento en cuestión en el CD-ROM.

Acerca del CD-ROM

Prestaciones del CD-ROM:

- Programas de actualización de sistema compatibles con el nuevo formato de las placas de ampliación SRX (para Fantom, XV-5080, XV-3080, XV-88 y RD-700)
- Datos que reproducen los Patches y Sets de Percusión Originales del SR-JV
- Canciones de autodemostación SRX-01–09
- Tabla de Conversión de BPM

Para obtener información más detallada acerca de cada uno de los archivos, vea [index_e.html](#) en el CD-ROM.

- * *Cuide el CD-ROM; no será reeditado.*
- * *Los programas de sistema en el CD-ROM son las versiones más recientes desde Septiembre de 2002. Para obtener más información respecto a versiones aún más recientes, contacte con el Centro de Servicio Roland más cercano.*

Copyright © 2002 ROLAND CORPORATION

Todos los derechos quedan reservados. Se prohíbe la reproducción de cualquier forma de esta publicación sin el permiso expreso por escrito de ROLAND CORPORATION.

Roland Corporation

03122756

'02-9-B3-11N